



***GMT355 Electric Fan conversion* P-030002**

1. Follow instructions for electric fan install P-030001.
2. Install the PCM pin in connector J3 (Gray) Pin 49. See illustration below.
3. Route subharness to main harness and plug in.
4. The three pin plug will then plug into the main fan harness installed for P-030001
5. A PCM patch is **REQUIRED** to run the electric fan. Please contact us if you have not already had your PCM patched. If you own HPTuners you can patch the PCM yourself. Please visit pcmofnc.com/install/fan/GMT355 to download. If you cannot find a file similar to your application email your stock file to sales@pcmofnc.com

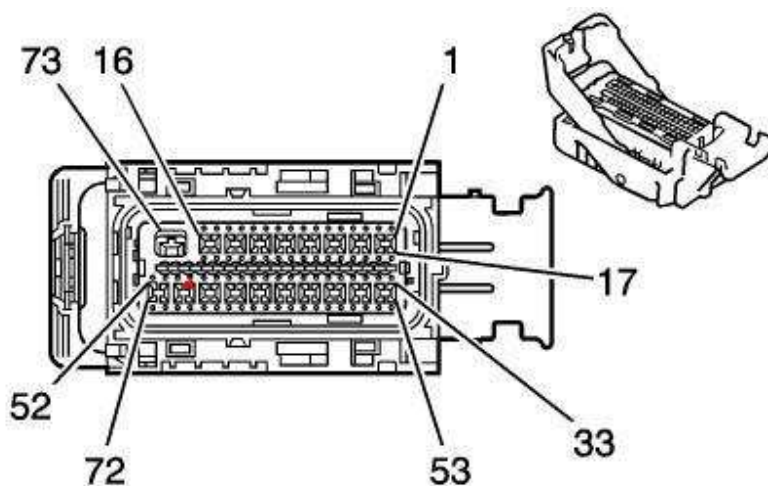


Illustration 1: J3 Connector (Gray) red dot indicates pin 49